



Communication and Power Cable Connections

STEP 1:

Connect the DB9 connector of the cable to an available COM Port via a straight through DB9M – DB9F cable. If you do not have this cable, you may purchase this product directly from us at the following link:

http://www.matrixorbital.com/product_info.php?pName=serial-cable-4br&cName=lcd-accessories-communication

STEP 2:

The red connector or the “Display Connector”, as it is shown in the Figure below, can be connected directly to the modules 4 pin communication/power connector. **WARNING: This is a locking header and can only be placed one way, failure to install properly will cause damage to your module and void warranty.**

STEP 3:

The last and final step will have you connecting an unmodified floppy power cable from your PC to the “Unmodified Floppy Power Connector”, as it shown in the figure below. **WARNING: This is a locking header and can only be placed one way, failure to install properly will cause damage to your module and void warranty.**

